

# QUICK START GUIDE ENGLISH

TOTAL HOME **FX**™ 800 SERIES


TOTALHOME FX   

HELP/FAQ/TIPS [WWW.TOTALHOMEFX.COM](http://WWW.TOTALHOMEFX.COM)  
888-476-7100  
CUSTOMERSERVICE@PRODUCTWORKSLLC.COM




# QUICK START


[WWW.TOTALHOMEFX.COM](http://WWW.TOTALHOMEFX.COM)  
888-476-7100  
CUSTOMERSERVICE@PRODUCTWORKSLLC.COM

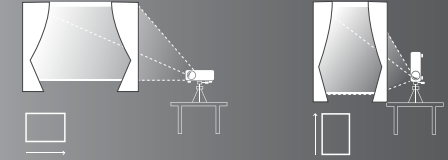

## USB

 

- Multimedia**: Press **OK** to enter the Multimedia menu.
- Items**: Press **OK** to view available items like Photos and VIDEOS.
- Orientation**: Press **OK** to choose between HORIZONTAL and VERTICAL display.
- Themes**: Press **OK** to select a theme like Halloween or Christmas.
- Grid**: Press **OK** to view a grid of content.
- Play**: Press **OK** followed by the play button to start playback.

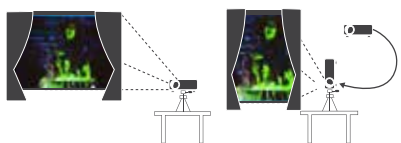


## HDMI




 
## FLIPPING AND ROTATING



- Press **OK** to enter the menu.
- Press **Left** to flip the image.
- Press **Right** to rotate the image.
- Press **OK** to confirm the selection.
- Press **OK** to exit the menu.

## VIDEO REPEAT



- Press **OK** followed by **1** for x1 repeat.
- Press **OK** followed by **2** for x2 repeat.
- Press **OK** followed by **3** for x3 repeat.
- Press **OK** followed by **Exit** to stop repeat.

[WWW.PRODUCTWORKSLLC.COM](http://WWW.PRODUCTWORKSLLC.COM)

[WWW.TOTALHOMEFX.COM](http://WWW.TOTALHOMEFX.COM)

TOTAL HOME **FX**™

# GUÍA DE ENCENDIDO RÁPIDO ESPAÑOL

TOTAL HOME **FX**™ 800 SERIES

TOTALHOME FX   


AYUDA/PREGUNTAS FRECUENTES/CONSEJOS

WWW.TOTALHOMEFX.COM  
888-476-7100  
CUSTOMERSERVICE@PRODUCTWORKSLLC.COM



## ENCENDIDO RÁPIDO


WWW.TOTALHOMEFX.COM  
888-476-7100  
CUSTOMERSERVICE@PRODUCTWORKSLLC.COM

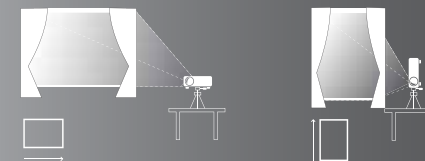

### USB



- Multimedia**: Press **OK** to enter the Multimedia menu.
- Files**: Press **OK** to view files like 'Hobbit' and 'VIDEOS'.
- Orientation**: Press **OK** to choose between **HORIZONTAL** and **VERTICAL**.
- Themes**: Press **OK** to choose themes like **Halloween** and **Christmas**.
- Navigation**: Press **OK** to navigate through the file list.
- Play**: Press **OK** followed by the **Play/Pause** button to start the video.

 


### HDMI





**HDMI**  
HIGH DEFINITION MULTIMEDIA INTERFACE

### VOLTEAR Y ROTAR



- Press **Rotate** to view the video from a different angle.
- Press **Rotate** again to rotate the video 90 degrees.
- Press **Rotate** again to rotate the video 180 degrees.
- Press **Rotate** again to rotate the video 270 degrees.
- Press **Rotate** again to return to the original orientation.

### REPETIR VIDEO



- Press **Repeat** once (x1) to repeat the video once.
- Press **Repeat** twice (x2) to repeat the video twice.
- Press **Repeat** three times (x3) to repeat the video three times.
- Press **Repeat** and then **SALIR** to exit the repeat mode.

WWW.PRODUCTWORKSLLC.COM

WWW.TOTALHOMEFX.COM

TOTAL HOME **FX**™